
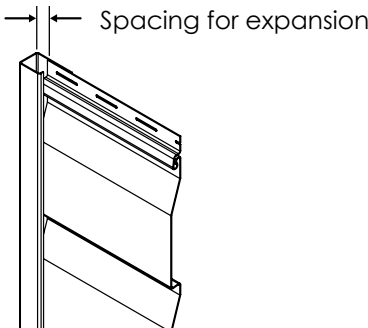


For an adequate installation, follow these instructions. Failure to respect these instructions may cause the deformation of the siding when temperatures vary. The responsibility of the installation in accordance with this guide falls back on the installer of the siding. Any negligence relating to these instructions can void the warranty.

Install the vinyl siding and accessories on a solid, flat and straight surface.
Do not draught proof the panels with the accessories and the overlaps of the siding.
Do not forcefully sink the nails, screws or staples through the siding. The siding must be able to move at any time.
Do not store the siding in a location where the temperature can exceed 55°C (131°F).

The siding must be free to move anytime. Be sure to leave adequate space for expansion.

Model	Exterior temperature for installation	Expansion spacing with accessories	
V-1450, V-1451 V-2450, V-2451 V-1005, V-2005	4 °C and over	1/4" (6 mm)	
	Under 4 °C	3/8" (9 mm)	
V-3450, V-3451 V-1151, V-1001 V-3005	20 °C and over	1/4" (6 mm)	
	Under 20 °C	3/8" (9 mm)	

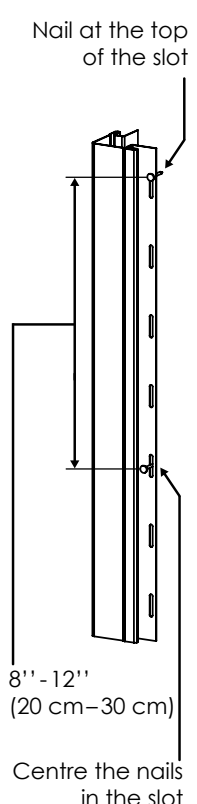


Nail at the top of the slot


8'' - 12''
(20 cm - 30 cm)

Centre the nails in the slot


Free space area of 1/32'' (1 mm) under the head of the nail

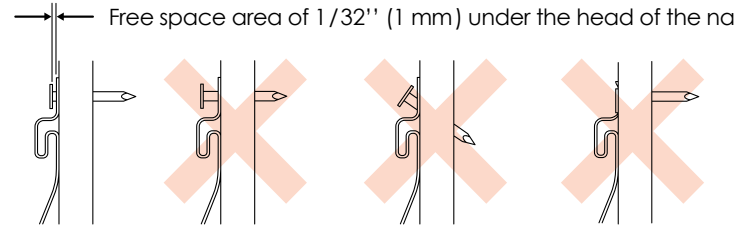


Nail at every 12'' (30 cm) or 16'' (40 cm)

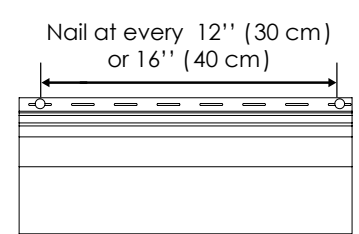


Centre the nails in the slot

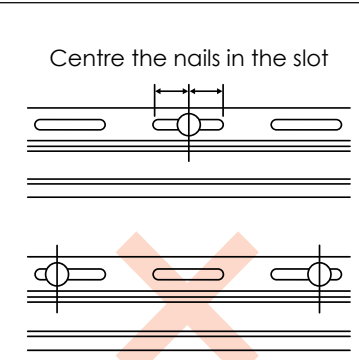

Overlap the panels 3/4'' (19 mm)

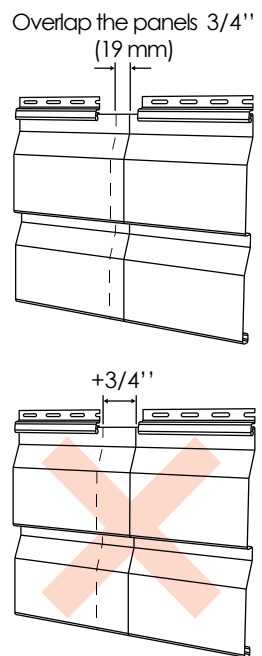

When installing a siding panel, push up from the bottom until the lock is fully engaged with the piece below it. Without stretching the panel, reach up and fasten it into place.

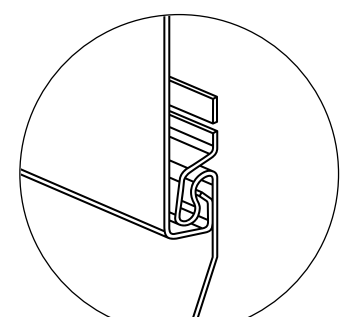

The lock should not be obstructed

